



AST-4010 FUEL TRANSFER CONTROLLER

SINGLE TANK INSTALLATION

THE TYPES OF ALARM AND JUNCTION BOXES USED ARE DEPENDANT UPON THE ENVIRONMENT IN WHICH THEY ARE TO BE INSTALLED.

LOCAL AND NATIONAL CODES AND RESTRICTIONS SHOULD BE FOLLOWED.

